 




**ML - 50 SF
AUDIO LIGHT
INSTANTS**

User Manual

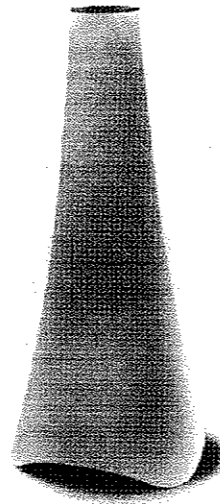

**Please read the instruction carefully
before operating the unit.**

English

TURN ON/OFF THE UNIT

Switch the POWER ON/OFF Switch (3) to ON position to turn on the unit, switch to OFF position to turn off the unit (recharging progress will continue).

LIGHT

This player is equipped with a multicolor ambience light.

1. Turn on the unit, 7 kinds of different color light change automatically, each lights up for around 5 seconds.
2. Press button (5) repeatedly, color light will change between "fixed current color light" and "change to next color light". To switch off the light, press and hold button for about 4 seconds. Press this button again, color lights resume with changing color mode.

AUDIO FROM EXTERNAL DEVICE

This unit includes the AUX LINE IN jack (8) to allow you to connect external devices, such as MP3 player and listen to the music stored on your external device through the speaker of this unit.

1. Connect the headphone jack of your external source to the AUX LINE IN cable (8).
2. Turn on the unit and your external source. Adjust the volume to the desired level by the volume buttons of your auxiliary source.
3. To stop listening to the external source, disconnect your source from the AUX LINE IN cable (8), or turn off your auxiliary device.

GB - 3


UNPACKING YOUR UNIT

When you unpack your new lighting product, make sure that you have removed all the accessories and information papers.


- Main unit
- AC adaptor
- User manual

LOCATION OF CONTROLS


Front view

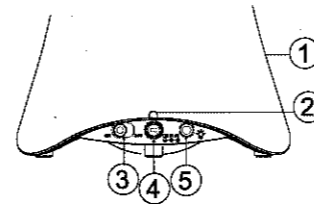

Top view

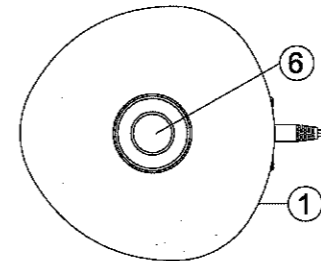

Bottom view

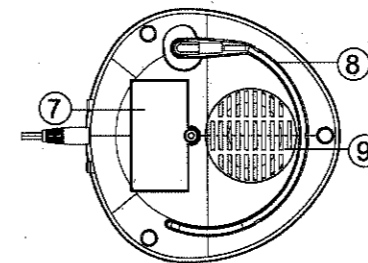

1. Light diffuser
2. Battery recharge indicator
3. Power ON/OFF switch
4. DC IN jack
5. Light switch
6. Removable flower container
7. Battery compartment
8. AUX line-in cable
9. Speaker

GB - 1

MORE INFORMATION

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION : To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.

The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING - To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

For indoor use only

CLASS 1 LED product

IMPORTANT

- Do not place the product in closed bookcases or racks without proper ventilation.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- The marking information is located at the bottom of apparatus.
- Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
- Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-clothes, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Use the apparatus only in moderate climates.

GB - 4

POWER SUPPLY

Using the AC adaptor

This AC/DC adaptor operates on AC 100-240V ~ 50/60Hz.

Cautions:

- The included AC/DC adaptor is for use with this unit only. Do not use it with other equipments.
- When the unit is not going to be used for long time, disconnect the AC adaptor from the AC outlet.
- Be sure to use it near the wall outlet. If a malfunction occurs, disconnect the plug from the wall outlet at once.
- When the AC/DC adaptor is plugged in, the apparatus will not be completely disconnected from the main power source, even when the unit is turned off.
- AC/DC adaptor is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To disconnect the apparatus from supply mains, completely disconnect the AC/DC adaptor of the apparatus from the mains socket outlet.

Rechargeable battery operation

This unit enables you to recharge the included rechargeable batteries by connecting AC adaptor to the AC wall outlet (even when you are using the light and audio). When the unit is in recharging progress, the recharge indicator will light up with red light. When the recharging is finished, recharge indicator will change to be green.

Note: Do not charge continuously for 24 hours or more. Doing so can damage the performance of the rechargeable batteries.

GB - 2

- Do not be exposed to dripping or splashing. And that no object filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use your set immediately after transport from a cold place to a warm place, there may be condensation problems.
- Make sure that you keep your set away from water and high temperatures.
- Clean the player with a soft cloth, or damp chamois leather. Never use solvent.
- To be completely disconnected the power input, the mains plug of the apparatus shall be disconnected from the mains completely.
- The mains plug should not be obstructed or should be easily accessed during intended use.
- Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- Under the influence of electrical fast transient or/and electrostatic phenomenon, the product may malfunction and require user to power reset.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

GB - 5

