

Fire bowl with Grill Function “Barrow”

Item-no.: 222-797

Follow these tips for the correct use of our fire bowl with grill function:

Initial operation, cleaning and care

- Fire up the fire bowl and the grilling grate at high heat for 30-60 minutes before the first barbecue or grill session to ensure low-emission barbecue enjoyment.
- A rough basic cleaning of the bowl after every use is recommended. It is sufficient if you clear the inside of the bowl of ash and soot rests and then wipe it clean with a damp cloth.
- If you leave the bowl outside, make sure that you keep the hole in the middle of the fire bowl open for rainwater to drain.
- It is a good idea to wipe the fire bowl with oil (such as cooking oil) after each use to prevent rust.
- The intense heat can cause the powder coating to come loose, especially in the middle of the fire bowl. This gives the fire bowl a unique character by developing a beautiful patina over time. Alternatively, you can also lightly sand the affected areas and spray with a heat-resistant thermal spray paint.

Safety instructions

- The fire bowl must never be left unattended when in use. Sparks can cause fires when left unattended.
- Always use water to extinguish the fire – there can still be glowing embers under the ashes.
- Keep playing children at a safe distance away from the fire bowl.
- Always place the fire bowl on a fireproof surface, for example, on tiles or pebbles. If the two options mentioned above are not available, the fire bowl should be placed on a steel plate, for example. Place the fire bowl only on a well-watered lawn, because the grass can burn through the indirect heat.
- Use only suitable solid or liquid fire lighters, never pour petrol or methylated spirits onto an open flame! Flash fire!
- Use the fire bowl outdoors only, away from flammable objects.
- Always keep a bucket of water or other suitable extinguishing agent such as sand or a fire extinguisher close by and ready.