



SHP ANTI-THEFT BAG WITH ALARM

Functions

This rugged shoulder bag from ballistic nylon provides the following three types of protection:

1. **Against theft/attack with the siren alarm**
2. **Against hacking and scanning the data it contains**
3. **Against theft thanks to the slash-proof shoulder strap**

The 120 dB siren protection can be triggered for a fraction of a second by pulling the pin from the siren located on the shoulder strap. The zippered pocket to the left of the 3 card slots is made of RFID-blocking material, thus preventing hackers from stealing the data contained in chip cards or passports using remotely controlled methods. The shoulder strap has a built-in steel cable making it impossible to cut through the strap

Description



Figure 1 – Front View



Figure 2 – Inside Pocket

1. **Bag handle**
2. **Cut-resistant shoulder strap**
3. **Safety siren**
4. **Lanyard for keys**
5. **Pocket for storing small water bottle (0.33 l)**

6. **Flap with double locking system: zipper and scratch tape**
7. **1 RFID-blocking zippered pocket**
8. **3 card slots**
9. **1 small pen holder**



Figure 3 – Safety Siren

10. **Cord on the pin to activate the alarm**

Batteries required for safety siren:
1 x 23A button cell battery of 1.2V.

Activate and deactivate the alarm



Pull the cord on the safety siren pin to activate the alarm.



To stop the alarm, push the pin back into the small hole of the safety siren.

How to change the battery:

1. Remove the battery compartment on the back of the safety siren. Loosen the two screws and remove the battery compartment.
2. Install the 1 x 23A button cell battery in the battery compartment and make sure the positive (+) and negative (-) poles are correct.
3. Close the battery compartment (string of pin facing down)

Pro-Idee Article number: 224360



Importer:
SUPERHOTPAD UG (haftungsbeschränkt)
sourcing - trading - matching
Bergstraße 6, 96352 Wilhelmsthal, Germany