

Dishwasher Odour Destroyer

Item-no.: 231-424

Creates pleasant fresh air and streak-free shine with every rinse cycle

- Neutralises all such odours as fish, leftover food, aggressive detergents, etc.
- Environmentally friendly, without chemical additives
- No overlaid artificial odours
- Streak-free shine; no lime spots on glasses, cutlery, porcelain, etc.
- Replaces rinse aids

Application:

- Hang the zilofresh Dishwasher Odour Destroyer on the side of the cutlery compartment.
- Replace shine tab if necessary (pull up with light pressure)
- The tab will remain effective for up to 40 rinses; please replace it when it turns dark

Note: zilofresh removes odours, but is not a substitute for detergents. Shine tabs are available separately.

D: Pro-Idee GmbH & Co. KG · Auf der Hüls 205 · D 52053 Aachen · Tel.: 02 41-109 119

NL: Pro-Idee · Wijchenseweg 132 · NL 6538 SX Nijmegen · Tel.: 024-3 511 277

UK: Pro-Idee · Woodview Road · Paignton · TQ4 7SR · Tel.: 01803 677 916

F: Pro-Idée · F 67962 Strasbourg - Cedex 9 · Tél.: 03 88 19 10 49

CH: Pro-Idee Catalog GmbH · Fürstenlandstrasse 35 · CH 9000 St. Gallen · Tel.: 0 71-2 74 66 19

A: Pro-Idee Catalog GmbH · Bundesstraße 112 · A 6923 Lauterach · Tel.: 05574-803 51

© Pro-Idee Aachen